



IX Series Leaf Canister

INSTALLATION AND OPERATING INSTRUCTIONS





For full warranty terms and conditions and to register your warranty, simply visit **www.astralpool.com.au/warranty** and complete your details. Or scan the QR code and be taken directly to the registration page.

Record your equipment details here for quick reference:

Model No.: _____

Serial No.: _____

INSTALLATION

1. Install Leaf Canister filter on a clean, stable and level base. Canister should be installed on the inlet side of the pump.
2. The leaf canister has one inlet ports (from Pool/Spa) and three outlet ports (to Pump). Glue 50mm tail into the inlets and one 50mm tail into one of the outlets of the filter that suits the plumbing configuration.
3. Glue in blanking caps into the two remaining inlets. Allow a minimum on one hour for glue to dry.

START UP INSTRUCTIONS

1. Before start up make sure the canister basket is in the tank.
2. Fill canister with water to top.
3. Fit lid and lock ring and ensure it is in place and tightened.
4. Close both the Air Bleed Screws fitted to the lid.
5. Start pump – Check there is a good flow of water back in the pool.
6. Clean the basket when the flow to the pool reduces.

TO CLEAN CANISTER BASKET

1. Stop pump-close valves on the suction and return lines of the canister.
2. Open one the air bleed valve on the lid.
3. Loosen lock ring and remove basket.
4. Lift out basket. Remove debris with hand. Do not bang against hard surfaces to remove debris; Damage to basket may occur voiding warranty. Replace the basket – carefully locating it on the bottom spigot.
5. Clean the lid 'o' ring. Replace the lid and press firmly into place.
6. Tighten the lid lock ring until safety catch locks.
7. Fill with water
8. Close the valves – start the pump.

NEVER LOOSEN THE LOCK RING WHEN THE PUMP IS WORKING



INST236

Fluidra Group Australia Pty Ltd,
ABN 87 002 641 965
219 Woodpark Road Smithfield NSW 2164
AU 1300 763 021